

FORD – FALCON – EL / XK

#T0116

Make: Ford

Model: Falcon EL / XH 4.0L

Subject: Incorrect ignition timing procedures

TEST: Injectronics receives numerous phone calls relating to how poorly the vehicle operates after setting the ignition timing or removing & refitting the distributor.

The fact is the ignition timing has been set incorrectly.

The ignition timing procedure is;

- 1. The engine must be at the normal operating temperature,
- 2. A/C must be OFF,
- 3. Connect a timing light to number one cylinder,
- 4. With the ignition switch in the off position, bridge the STI & GND terminals in the data link connector (right hand lower dash panel),
- 5. Start the engine; the Engine Running self-test will cause a momentary rise in engine speed, to 1300-1600 rpm shortly after start-up, this is an indication that the ERST has been initiated.
- 1. THIS IS WHERE THE PREVIOUS MODELS DIFFER
- 6. Wait at least 2 minutes whilst the PCM goes through its ENGINE RUNNING SELF TEST MODE.

After this point the base ignition timing can be checked & set according to the manufactures specifications within 2 minutes. The ignition timing will revert back to PCM control after approximately 2 minutes from the completion of the ERST.

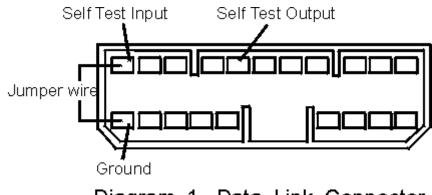


Diagram 1. Data Link Connector

injectronics.com.au

This information has been offered with the intent to provide a resource of reliable information; however no warranty (express or implied) is made as to the accuracy or completeness. No liability is assumed by Injectronics for damage or loss resulting from reliance on this information or process.